

## How to Reset the power points for Ball Machine

If the ball machine socket is not working and shows no red LED when switched on, then the most likely reason is that the RCD has been tripped and requires a reset.

You will find a hex key in the lighting box which can be used to open the panels at the base of either of the two central light posts.



Unscrew the triangle-head bolt and lift our panel.



Press the Reset button. The red LED should now indicate that the socket has power supply.



Replace the panel and screw the bolt back into place.

Return the key to the lighting box and remember to secure the door of the box using the catches.